

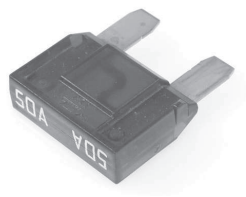 
fuseholder accessories





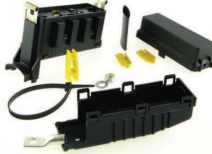 


	Part number	Characteristics
	F9-1210-1002	fuse type: MaxiVAL; lid
	F9-1210-1022	fuse type: MaxiVAL; lid
	F9-1210-1033	fuse type: MaxiVAL; lid
	F9-1210-1042	fuse type: MaxiVAL; dowel; maximum current: 20 A
	F9-1210-1043	fuse type: MaxiVAL; dowel; maximum current: 30 A
	F9-1210-1044	fuse type: MaxiVAL; dowel; maximum current: 40 A
	F9-1210-1045	fuse type: MaxiVAL; dowel; maximum current: 50 A

	Part number	Characteristics
	F9-1210-1046	fuse type: MaxiVAL; dowel
	F9-1210-1047	fuse type: MaxiVAL; dowel; maximum current: 70 A
	F9-1210-1048	fuse type: MaxiVAL; dowel; maximum current: 80 A
	F9-1210-1049	fuse type: MaxiVAL; dowel; maximum current: 100 A
	F9-1210-1058	fuse type: MaxiVAL; lid
	F9-1210-1059	fuse type: MaxiVAL; lid
	F9-1210-2009	fuse type: MaxiVAL; lid
	F9-1210-4008	fuse type: MaxiVAL; lid
	F9-1210-4009	fuse type: MaxiVAL; lid

MaxiVal fuseholders



	Part number	Characteristics
A black plastic 1-pole fuseholder with a clear protective window on the front.	F9-1210-1000	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 1-pole
A black plastic 1-pole fuseholder with a rectangular front face and a small notch on the side.	F9-1210-1001	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 1-pole; 32 V
A white plastic 10-pole fuseholder with a rectangular front face and a small notch on the side.	F9-1210-1021	fuse type: MaxiVAL; 10-pole; 32 V
A black plastic 1-pole fuseholder with a rectangular front face and a small notch on the side, shown next to a yellow terminal block.	F9-1210-1031	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 1-pole; 32 V
A black plastic 1-pole fuseholder with a rectangular front face and a small notch on the side, shown next to a yellow terminal block and a small metal component.	F9-1210-1050	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 1-pole; 32 V
A black plastic 1-pole fuseholder with a rectangular front face and a small notch on the side, shown next to a yellow terminal block.	F9-1210-1051	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 1-pole; 32 V
A black plastic 2-pole fuseholder with a rectangular front face and a small notch on the side, shown next to a yellow terminal block and a small metal component.	F9-1210-2000	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 2 poles; 32 V
A black plastic 2-pole fuseholder with a rectangular front face and a small notch on the side, shown next to a yellow terminal block.	F9-1210-2001	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 2 poles; 32 V

	Part number	Characteristics
	F9-1210-4000	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 4 poles; 32 V
	F9-1210-4001	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 4 poles; 32 V
	F9-1210-4010	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 4 poles; 32 V
	F9-1210-4011	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; 4 poles; 32 V
	F9-1230-1100	fuse type: MaxiVAL; fuseholder for ATO/ UniVal type; contacts: Anschlussleitung 10 mm ²

accessories

covers	Deckel für Maxi-Sicherungshalter F9-1210-1002	¹ (S. 55)
	Deckel für Maxi-Sicherungshalter F9-1210-1033	² (S. 55)
	Deckel für Maxi Sicherungshalter F9-1210-1058	³ (S. 56)
	unterer Deckel für Maxi-Sicherungshalter F9-1210-1059	⁴ (S. 56)
	Deckel für Maxi-Sicherungshalter, 2-fach F9-1210-2009	⁵ (S. 56)
	unterer Deckel für Maxi-Sicherungshalter F9-1210-4008	⁶ (S. 56)
	Deckel für Maxi-Sicherungshalter, 4-fach F9-1210-4009	⁷ (S. 56)
Kodierdübel	Dübel 20A für Maxi-Sicherungshalter F9-1210-1042	⁸ (S. 55)
	Dübel 30A für Maxi-Sicherungshalter F9-1210-1043	⁹ (S. 55)
	Dübel 40A für Maxi-Sicherungshalter F9-1210-1044	¹⁰ (S. 55)
	Dübel 50A für Maxi-Sicherungshalter F9-1210-1045	¹¹ (S. 55)
	Dübel 60A für Maxi-Sicherungshalter F9-1210-1046	¹² (S. 56)
	Dübel 70A für Maxi-Sicherungshalter F9-1210-1047	¹³ (S. 56)
	Dübel 80A für Maxi-Sicherungshalter F9-1210-1048	¹⁴ (S. 56)
	Dübel 100A für Maxi-Sicherungshalter F9-1210-1049	¹⁵ (S. 56)

¹ only valid for F9-1210-1001

² only valid for F9-1210-1031

³ only valid for F9-1210-1051

⁴ only valid for F9-1210-1051

⁵ only valid for F9-1210-2000 F9-1210-2001

⁶ only valid for F9-1210-4000 F9-1210-4001

⁷ only valid for F9-1210-4000 F9-1210-4001

⁸ only valid for F9-1210-1031 F9-1210-1050 F9-1210-1051

⁹ only valid for F9-1210-1031 F9-1210-1050 F9-1210-1051

¹⁰ only valid for F9-1210-1031 F9-1210-1050 F9-1210-1051

¹¹ only valid for F9-1210-1031 F9-1210-1050 F9-1210-1051

¹² only valid for F9-1210-1031 F9-1210-1050 F9-1210-1051

¹³ only valid for F9-1210-1031 F9-1210-1050 F9-1210-1051

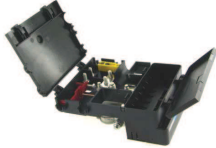 
¹⁴ only valid for F9-1210-1031 F9-1210-1050 F9-1210-1051

¹⁵ only valid for F9-1210-1031 F9-1210-1050 F9-1210-1051

kombinierte Sicherungshalter

replacement picture

Part number**Characteristics**

**F9-2001-0200**

fuse type: MaxiVal / MidiVal; 10-pole; 32 V

MegaVal fuseholders



	Part number	Characteristics
	F9-2100-1200	fuse type: MegaVal; strip fuseholder; 1-pole; 32 V
	F9-2100-1201	fuse type: MegaVal; strip fuseholder; 1-pole; 32 V
	F9-2130-1000	fuse type: MegaVal; strip fuseholder; 1-pole; 32 V
	F9-2100-1100	fuse type: MegaVal; fuseholder all- round; 42 V; maximum current: 250 A; bolt distance: 50,8 mm
	F9-2100-1101	fuse type: MegaVal; fuseholder all- round; 42 V; maximum current: 250 A; bolt distance: 50,8 mm

accessories




- lid for allround- fuseholder, small F9-9202-0000¹(S. 70)
- lid for allround- fuseholder, high F9-9202-0001²(S. 70)

¹only valid for F9-2100-1100 F9-2100-1101

²only valid for F9-2100-1100 F9-2100-1101



kombinierte Sicherungshalter

replacement picture

	Part number	Characteristics
	F9-2100-3200	fuse type: MegaVal / MidiVal; strip fuseholder; 3-pole; 32 V
	F9-2100-4000	fuse type: MegaVal / MidiVal; strip fuseholder; 4 poles
	F9-2100-4200	fuse type: MegaVal / MidiVal; strip fuseholder; 4 poles; 32 V

fuseholder accessories

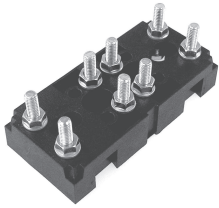 


Part number	Characteristics
	F9-9410-0000 fuse type: MidiVal; jumper
	F9-9410-0010 fuse type: MidiVal; jumper

MidiVal fuseholders



	Part number	Characteristics
	F9-2000-1010	fuse type: MidiVal; strip fuseholder; 1-pole; 32 V
	F9-2000-1011	fuse type: MidiVal; strip fuseholder; 1-pole; 32 V
	F9-2000-2000	fuse type: MidiVal; fuseholder all- round; 2 poles; 32 V; maximum current: 250 A; bolt distance: 30 mm
	F9-2000-2001	fuse type: MidiVal; fuseholder all- round; 2 poles; 32 V; maximum current: 250 A; bolt distance: 30 mm
	F9-2000-2010	fuse type: MidiVal; allround fuseholder for link; 2 poles; 32 V; maximum current: 250 A; bolt distance: 30 mm
	F9-2000-2011	fuse type: MidiVal; allround fuseholder for link; 2 poles; 32 V; maximum current: 250 A; bolt distance: 30 mm
	F9-2000-4000	fuse type: MidiVal; fuseholder all- round; 4 poles; 32 V; maximum current: 125 A; contacts: screw M5

Part number	Characteristics
 F9-2000-4001	fuse type: MidiVal; fuseholder all- round; 4 poles; 32 V; maximum current: 125 A; contacts: screw M5

accessories

covers	lid for allround- fuseholder, small F9-9202-0000	(S. 70)
	lid for allround- fuseholder, high F9-9202-0001	(S. 70)
contact plates	Kontaktplatte, 4-fach F9-9410-0000	¹ (S. 64)
	Kontaktplatte, 2-fach F9-9410-0010	² (S. 64)
	Verbindungsbrücke F9-9410-0020	³ (S. 70)

¹only valid for F9-2000-4000 F9-2000-4001
²only valid for F9-2000-2010 F9-2000-2011
³only valid for F9-2000-2010 F9-2000-2011

Feinsicherungshalter

Part number**Characteristics**

**F9-5130-1000**

fuse type: miniature fuse 5x20; 1-pole; maximum current: 2 A

fuseholder accessories







Part number	Characteristics
-------------	-----------------



F9-1010-1009 fuse type: MiniVAL; lid

MiniVal fuseholders



	Part number	Characteristics
	F9-1000-7000	fuse type: MiniVAL; fuseholder for ATO/ UniVal type; 7-pole; 32 V
	F9-1010-1000	fuse type: MiniVAL; fuseholder for ATO/ UniVal type; 1-pole; 32 V
	F9-1030-1100	fuse type: MiniVAL; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 30 A; contacts: connecting wire 4mm ²
	F9-1040-1000	fuse type: MiniVAL; PCB fuseholder; 1-pole; 32 V


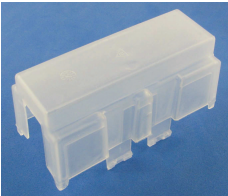 

accessories

Korbdeckel für Sicherungshalter F9-1010-1009 ¹(S. 68)

¹ only valid for F9-1010-1000

fuseholder accessories



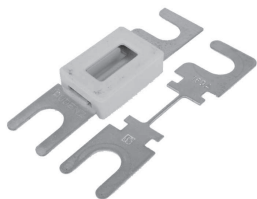 
Part number	Characteristics
	F9-9202-0000 fuse type: strip fuse 60mm; lid for all- round fuseholder
	F9-9202-0001 fuse type: strip fuse 60mm; lid for all- round fuseholder
	F9-9410-0020 fuse type: strip fuse 60mm; jumper

accessories

- lid for allround- fuseholder, small F9-9202-0000 ¹(S. 70)
- lid for allround- fuseholder, high F9-9202-0001 ²(S. 70)

¹only valid for F9-9202-0000 F9-9202-0001
²only valid for F9-9202-0000 F9-9202-0001

strip fuseholders



 
	Part number	Characteristics
	F9-3400-1100	fuse type: strip fuse 60mm; fuseholder all- round; 42 V; bolt distance: 61 mm
	F9-3400-1101	fuse type: strip fuse 60mm; fuseholder all- round; 42 V; bolt distance: 61 mm
	F9-3400-1110	fuse type: strip fuse 60mm; fuseholder all- round; 1-pole; 32 V; bolt distance: 61 mm
	F9-3400-1000	fuse type: strip fuse 60mm; fuseholder power; 42 V; bolt distance: 61 mm
	F9-3400-2000	fuse type: strip fuse 60mm; fuseholder power; 2 poles; 42 V; bolt distance: 61 mm

accessories

covers	lid for allround- fuseholder, small F9-9202-0000	(S. 70)
	lid for allround- fuseholder, high F9-9202-0001	(S. 70)
contact plates	Verbindungsbrücke F9-9410-0020	¹ (S. 70)

¹ only valid for F9-3400-1100 F9-3400-1101 F9-3400-1110

torpedo fuseholder


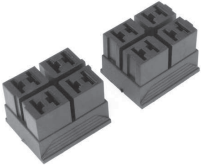 
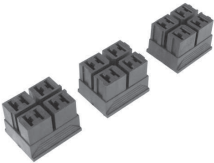 

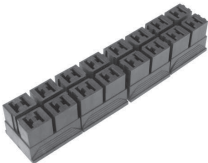 
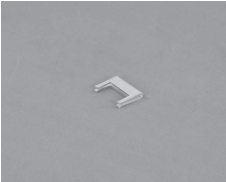 
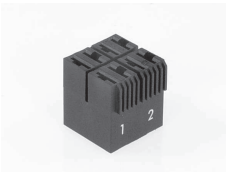 





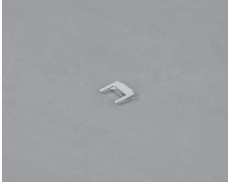 




	Part number	Characteristics
	F9-5000-2001	fuse type: torpedo fuse; torpedo fuseholder; 2 poles
	F9-5000-2010	fuse type: torpedo fuse; torpedo fuseholder; 2 poles
	F9-5000-4000	fuse type: torpedo fuse; torpedo fuseholder; 4 poles
	F9-5000-4001	fuse type: torpedo fuse; torpedo fuseholder; 4 poles
	F9-5000-6001	fuse type: torpedo fuse; torpedo fuseholder; 6 poles
	F9-5000-6011	fuse type: torpedo fuse; torpedo fuseholder; 6 poles
	F9-5000-8001	fuse type: torpedo fuse; torpedo fuseholder; 8-pole

	Part number	Characteristics
	F9-5001-2001	fuse type: torpedo fuse; torpedo fuseholder; 12-pole
	F9-5001-2011	fuse type: torpedo fuse; torpedo fuseholder; 12-pole
	F9-5030-1000	fuse type: torpedo fuse; torpedo fuseholder; 1-pole
	F9-5030-1001	fuse type: torpedo fuse; torpedo fuseholder; 1-pole; maximum current: 8 A
	F9-5030-1002	fuse type: torpedo fuse; torpedo fuseholder; 1-pole; maximum current: 16 A
	F9-5030-1010	fuse type: torpedo fuse; torpedo fuseholder; 1-pole; maximum current: 8 A
	F9-5030-1011	fuse type: torpedo fuse; torpedo fuseholder; 1-pole




fuseholder accessories



	Part number	Characteristics
	F8-1100-0900	fuse type: UniVal; central plug; 2 poles
	F8-1100-0910	fuse type: UniVal; central plug; 4 poles
	F8-1100-0920	fuse type: UniVal; central plug; 6 poles
	F8-1100-0921	fuse type: UniVal; central plug; 6 poles
	F8-1100-0930	fuse type: UniVal; central plug; 8-pole
	F8-1100-0950	fuse type: UniVal; jumper
	F8-1100-1901	fuse type: UniVal; coding socket; 8-pole

	Part number	Characteristics
	F8-1100-1902	fuse type: UniVal; coding socket; 8-pole
	F8-1100-1903	fuse type: UniVal; coding socket; 8-pole
	F8-1100-1904	fuse type: UniVal; coding socket; 8-pole
	F8-1100-1910	fuse type: UniVal; jumper
	F8-1100-1920	fuse type: UniVal; lid
	F8-1100-1921	fuse type: UniVal; mounting for circuit breaker; 8-pole
	F8-1100-1922	fuse type: UniVal; lid
	F8-1100-3049	fuse type: UniVal; lid

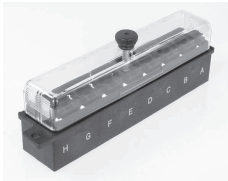 








	Part number	Characteristics
	F8-1100-3069	fuse type: UniVal; lid
	F8-1100-4049	fuse type: UniVal; lid
	F8-1100-4069	fuse type: UniVal; lid
	F8-1100-4089	fuse type: UniVal; lid
	F9-1100-6009	fuse type: UniVal; lid
	F9-1110-1007	fuse type: UniVal; lid
	F9-1110-1008	fuse type: UniVal; mounting plate
	F9-1110-1009	fuse type: UniVal; secondary lock
	F9-1110-1029	fuse type: UniVal; lid
	F9-1110-1055	fuse type: UniVal; sealing 0,5... 1,5mm ²

	Part number	Characteristics
	F9-1110-1056	fuse type: UniVal; sealing 2,0... 3,0mm ²
	F9-9300-0001	fuse type: UniVal; right bracket
	F9-9300-0002	fuse type: UniVal; left bracket

UniVal fuseholders



	Part number	Characteristics
	F8-1100-0020	fuse type: UniVal; fuseholder for ATO/ UniVal type; 2 poles; 32 V
	F8-1100-0021	fuse type: UniVal; fuseholder for ATO/ UniVal type; 2 poles; 32 V
	F8-1100-0040	fuse type: UniVal; fuseholder for ATO/ UniVal type; 4 poles; 32 V
	F8-1100-0041	fuse type: UniVal; fuseholder for ATO/ UniVal type; 4 poles; 32 V
	F8-1100-0060	fuse type: UniVal; fuseholder for ATO/ UniVal type; 6 poles; 32 V
	F8-1100-0061	fuse type: UniVal; fuseholder for ATO/ UniVal type; 6 poles; 32 V
	F8-1100-0080	fuse type: UniVal; fuseholder for ATO/ UniVal type; 8-pole; 32 V

	Part number	Characteristics
	F8-1100-0081	fuse type: UniVal; fuseholder for ATO/ UniVal type; 8-pole; 32 V
	F8-1100-1000	fuse type: UniVal; fuseholder for ATO/ UniVal type; 8-pole; 32 V
	F8-1100-1001	fuse type: UniVal; fuseholder for ATO/ UniVal type; 8-pole; 32 V
	F8-1100-1002	fuse type: UniVal; fuseholder for ATO/ UniVal type; 8-pole; 32 V
	F8-1100-3041	fuse type: UniVal; fuseholder for ATO/ UniVal type; 4 poles; maximum current: 32 A
	F8-1100-3042	fuse type: UniVal; fuseholder for ATO/ UniVal type; 4 poles; maximum current: 32 A
	F8-1100-3061	fuse type: UniVal; fuseholder for ATO/ UniVal type; 6 poles; maximum current: 32 A
	F8-1100-3062	fuse type: UniVal; fuseholder for ATO/ UniVal type; 6 poles; maximum current: 32 A
	F8-1100-4041	fuse type: UniVal; fuseholder for ATO/ UniVal type; 4 poles; maximum current: 32 A

fuses/accessories

	Part number	Characteristics
	F8-1100-4061	fuse type: UniVal; fuseholder for ATO/ UniVal type; 6 poles; maximum current: 32 A
	F8-1100-4081	fuse type: UniVal; fuseholder for ATO/ UniVal type; 8-pole; maximum current: 32 A
	F8-1100-4084	fuse type: UniVal; fuseholder for ATO/ UniVal type; 8-pole; maximum current: 32 A
	F8-1100-4085	fuse type: UniVal; fuseholder for ATO/ UniVal type; 8-pole; maximum current: 32 A
	F9-1100-5100	fuse type: UniVal; fuseholder for ATO/ UniVal type; 5 poles; 32 V; maximum current: 30 A; contacts: blade
	F9-1100-6000	fuse type: UniVal; fuseholder for ATO/ UniVal type; 6 poles; 32 V
	F9-1110-1000	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V
	F9-1110-1001	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V
	F9-1110-1002	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V

	Part number	Characteristics
	F9-1110-1003	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V
	F9-1110-1020	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V
	F9-1110-1023	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 10 A
	F9-1110-1024	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 15 A
	F9-1110-1041	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 1 A
	F9-1110-1045	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 5 A
	F9-1110-1047	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 10 A
	F9-1110-1048	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 15 A
	F9-1110-1049	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 20 A

	Part number	Characteristics
	F9-1110-1050	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 25 A
	F9-1110-1051	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 30 A
	F9-1110-1101	fuse type: UniVal; fuseholder for ATO/ UniVal type
	F9-1120-1000	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V
	F9-1120-1001	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V
	F9-1130-1000	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V
	F9-1130-1010	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V
	F9-1130-1020	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; contacts: 2 x 6,3 mm
	F9-1130-1030	fuse type: UniVal; fuseholder for ATO/ UniVal type; contacts: Schneid-klemmkontakte

	Part number	Characteristics
	F9-1130-1100	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 20 A; contacts: connecting wire red, 2,5mm ²
	F9-1130-1101	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; maximum current: 20 A; contacts: connecting wire red, 1,5mm ²
	F9-1130-1102	fuse type: UniVal; fuseholder for ATO/ UniVal type; 1-pole; 32 V; contacts: connecting wire 4mm ²
	F9-1140-1000	fuse type: UniVal; PCB fuseholder; 32 V; maximum current: 30 A; contacts: PCB mounting
	F9-1140-1010	fuse type: UniVal; PCB fuseholder; 32 V; maximum current: 30 A; contacts: PCB mounting
	F9-1140-1020	fuse type: UniVal; PCB fuseholder; 1-pole; 32 V; maximum current: 40 A
	F9-1140-5100	fuse type: UniVal; PCB fuseholder; 5 poles; 32 V; contacts: PCB mounting

accessories

	Zentralstecker 2-polig F8-1100-0900	¹ (S. 74)
	Zentralsteckerset 4-polig F8-1100-0910	² (S. 74)
	Zentralsteckerset 6-polig F8-1100-0920	³ (S. 74)
	Zentralsteckerset 6-polig F8-1100-0921	⁴ (S. 74)
	Zentralsteckerset 8-polig F8-1100-0930	⁵ (S. 74)
	Brücke für Flachsicherungsdose F8-1100-0950	⁶ (S. 74)
	Kodiersockel 1-2, schwarz F8-1100-1901	⁷ (S. 74)
	Kodiersockel 3-4, schwarz F8-1100-1902	⁸ (S. 75)
	Kodiersockel 5-6, schwarz F8-1100-1903	⁹ (S. 75)
	Kodiersockel 7-8, schwarz F8-1100-1904	¹⁰ (S. 75)
	Brücke für Sicherungsleiste 8-polig F8-1100-1910	¹¹ (S. 75)
	Deckel für Sicherungsleiste 8-polig F8-1100-1920	¹² (S. 75)
	Aufsatz für Sicherungsautomaten F8-1100-1921	¹³ (S. 75)
	Deckel für Sicherungsautomaten F8-1100-1922	¹⁴ (S. 75)
fixings	Haltewinkel, rechts F9-9300-0001	¹⁵ (S. 77)
	Haltewinkel, links F9-9300-0002	¹⁶ (S. 77)
covers	Deckel für Sicherungsdose 4-polig F8-1100-3049	¹⁷ (S. 75)
	Deckel für Sicherungsdose 6-polig F8-1100-3069	¹⁸ (S. 76)
	Deckel für Sicherungsdose 4-polig F8-1100-4049	¹⁹ (S. 76)
	Deckel für Sicherungsdose 8-polig F8-1100-4089	²⁰ (S. 76)
	unterer Deckel für Sicherungsdose F9-1100-6009	²¹ (S. 76)
	Deckel für Sicherungshalter F9-1110-1007	²² (S. 76)
	Korbdeckel für Sicherungshalter F9-1110-1029	²³ (S. 76)
Dichtungen	Gummidichtung für Sicherungshalter F9-1110-1055	²⁴ (S. 76)
	Gummidichtung für Sicherungshalter F9-1110-1056	²⁵ (S. 77)

¹only valid for F8-1100-0020 F8-1100-0021

²only valid for F8-1100-0040 F8-1100-0041

³only valid for F8-1100-0060 F8-1100-0061

⁴only valid for F8-1100-0060 F8-1100-0061

⁵only valid for F8-1100-0080 F8-1100-0081

⁶only valid for F8-1100-0080 F8-1100-0081

⁷only valid for F8-1100-1000 F8-1100-1001

⁸only valid for F8-1100-1000 F8-1100-1001

⁹only valid for F8-1100-1000 F8-1100-1001

¹⁰only valid for F8-1100-1000 F8-1100-1001

¹¹only valid for F8-1100-1000 F8-1100-1001

¹²only valid for F8-1100-1001

¹³only valid for F8-1100-1000 F8-1100-1001

¹⁴only valid for F8-1100-1001

¹⁵only valid for F9-1100-5100

¹⁶only valid for F9-1100-5100

¹⁷only valid for F8-1100-3041 F8-1100-3042

¹⁸only valid for F8-1100-3061 F8-1100-3062

¹⁹only valid for F8-1100-4041

²⁰only valid for F8-1100-4081 F8-1100-4084 F8-1100-4085

²¹only valid for F9-1100-6000

²²only valid for F9-1110-1001 F9-1110-1002 F9-1110-1003 F9-1110-1004

²³only valid for F9-1110-1020 F9-1110-1023 F9-1110-1024

²⁴only valid for F9-1110-1041 F9-1110-1045 F9-1110-1047 F9-1110-1048 F9-1110-1049 F9-1110-1050 F9-1110-1051

²⁵only valid for F9-1110-1041 F9-1110-1045 F9-1110-1047 F9-1110-1048 F9-1110-1049 F9-1110-1050 F9-1110-1051

glass-tube fuses 5x20



Part number	Characteristics
F1-5141-6723	miniature fuse 5x20; 250 V; 0,16 A; fast action; ceramic housing
F1-5142-0723	miniature fuse 5x20; 250 V; 0,2 A; fast action; ceramic housing
F1-5142-5720	miniature fuse 5x20; 250 V; 0,2 A; fast action; glass housing
F1-5145-0000	miniature fuse 5x20; 24 V; 0,5 A; glass housing
F1-5145-0740	miniature fuse 5x20; 250 V; 0,5 A; semi delay- action; glass housing
F1-5145-0760	miniature fuse 5x20; 250 V; 0,5 A; delay- action; glass housing
F1-5146-3723	miniature fuse 5x20; 250 V; 0,63 A; fast action; ceramic housing
F1-5151-0000	miniature fuse 5x20; 24 V; 1 A; glass housing
F1-5151-6723	miniature fuse 5x20; 250 V; 1,6 A; fast action; ceramic housing
F1-5152-0000	miniature fuse 5x20; 24 V; 2 A; glass housing
F1-5153-0000	miniature fuse 5x20; 24 V; 3 A; glass housing
F1-5153-1760	miniature fuse 5x20; 250 V; 3,15 A; delay- action; glass housing
F1-5154-0000	miniature fuse 5x20; 24 V; 4 A; glass housing
F1-5155-0000	miniature fuse 5x20; 24 V; 5 A; glass housing
F1-5155-0760	miniature fuse 5x20; 250 V; 5 A; delay- action; glass housing
F1-5156-0000	miniature fuse 5x20; 24 V; 6 A; glass housing
F1-5156-3762	miniature fuse 5x20; 250 V; 6,3 A; delay- action; sand- filled glass housing
F1-5158-0000	miniature fuse 5x20; 24 V; 8 A; glass housing
F1-5158-0762	miniature fuse 5x20; 250 V; 8 A; delay- action; glass housing
F1-5161-0000	miniature fuse 5x20; 24 V; 10 A; glass housing
F1-5161-0762	miniature fuse 5x20; 250 V; 10 A; delay- action; sand- filled glass housing
F1-5161-2000	miniature fuse 5x20; 24 V; 12 A; glass housing
F1-5161-5000	miniature fuse 5x20; 24 V; 15 A; glass housing